




INPRO/SEAL[®]


A **DOVER** COMPANY

INSTALLATION INSTRUCTIONS

Paper Machine Roll™ (PMR™)

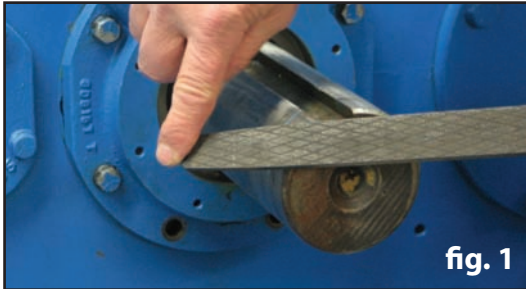

- 1- Remove burrs from the shaft, keyways and steps if present. [fig. 1]
- 2- Apply a thin layer of RTV to the flange where it meets the vessel.
- 3- Apply the supplied P-80[®] lube to the shaft and rotor drive rings. [fig. 2]
- 4- Slide the PMR™ onto the shaft with the expulsion port at the 6:00 down position if present. [fig. 4]

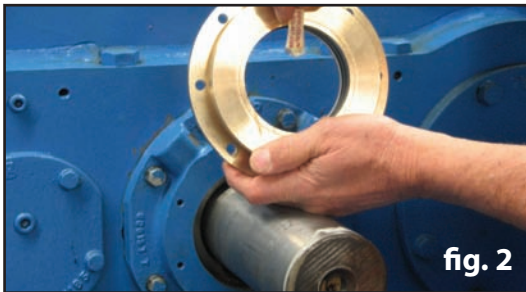

- 5- Bolt the PMR to the seal cage or bearing housing. [fig. 5]

P-80[®] is a registered trade mark of International Products Corporation.

