




INPRO/SEAL[®]

A DOVER COMPANY

INSTALLATION INSTRUCTIONS

Flange Mounted Bearing Isolator

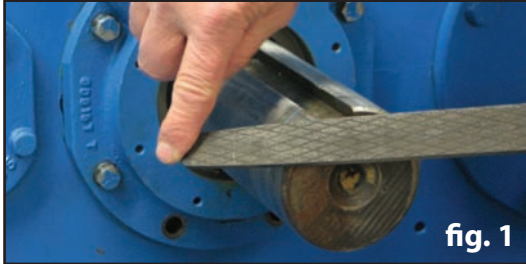

1- Remove burrs from the shaft, keyways and steps if present. [fig. 1]



2- Apply a thin layer of RTV to the flange where it meets the vessel. [fig. 2]



3- Apply the supplied P-80[®] lube to the shaft and rotor drive rings. [fig. 3]



4- Slide the Bearing Isolator onto the shaft with the expulsion port at the 6:00 down position if present. [fig. 4]



5- Bolt the Bearing Isolator to the seal cage or bearing housing. [fig. 5]

P-80[®] is a registered trade mark of International Products Corporation.

